

# Shutdown Procedures for WWPS Classroom Technology

## SMART Panel

There is a power button on the left side of the board. If that button is held, the board will show a slider for a power saving mode. Move the slider completely to the right and the board will go into an energy saving sleep mode.



## Document Camera

The document cameras can be turned off by pressing the power button on the camera. Note that the button does not need to be held, pressing it once will shut it down completely. Once the LED indicator turns red, the document camera has been turned off.



# Shutdown Procedures for WWPS Classroom Technology

## TeachLogic Sound System

To turn the TeachLogic system off, press the button on the left side of the receiver. The button does not need to be held to turn it off. Once pressed, you will see the LED indicator turn red once it is off like in the attached picture.

